

ASSEMBLY INSTRUCTIONS



Items included in the flat pack of each chair:

- Chair base and back
- Left and right armrests, and legs
- Left and right rear uprights
- 8 x 50 mm stainless steel screws
- 2 x 75 mm stainless steel screws
- 2 x 60 mm treaded s/s bolts
- 2 x brass cross dowels
- 1 x 5 mm allen key
- 1 x 5 mm allen drive piece



Instructions:


1. Fit back to base with 2 x 50 mm screws.
(image1 & 2)



1.



2.

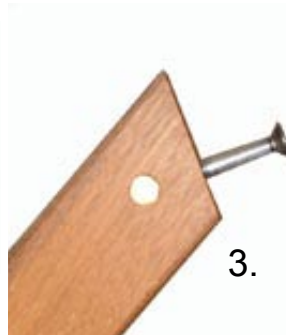

3.



4.

2. Fit left and right rear uprights to back brace with 60 mm bolts and cross dowels. (image3 & 4)


3. Secure the lower end of the rear upright into the pre-drilled hole.
(image 5)

AT THIS POINT, DO NOT TIGHTEN THESE BOLTS.



5.

Tighten with a 50 mm screw; now tighten the 60 mm bolt and cross dowel firmly. (image 6)

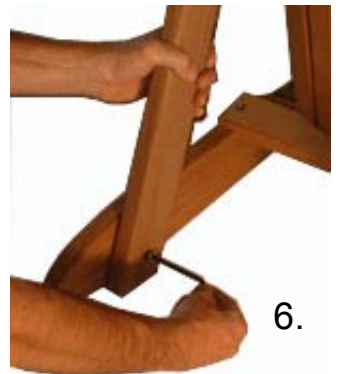

6.

4. Fit left and then right armrest with 75 mm screws through the pre-drilled holes in the rear uprights, taking care not to fully tighten (thereby allowing rotation into position).image 7, 8, 9



7.



9.



8.

ASSEMBLY INSTRUCTIONS



5. Carefully place chair on its side. Move armrests and legs into position. Using 50 mm screws, secure front legs to the base.



10.



11.

6. Now that your Adirondack chair is assembled, re-check the tightness of all fittings.

We recommend that you check the fittings periodically. Oil your chairs each change-of-season, to keep them looking good for years of comfort and relaxation.



Assembly notes: